

精源稳压器简易操作故障分析与排除

同于本机采用了先进电子检测保护技术,所以在工作中出现的有些故障并不意味有问题,请按以下说明检查一下:

故障表现 原因分析 总结排除

开机无输出、无电压指示 或无启动

- 1、输入电源断电 1、请确保输入电源为有效
 - 输出电压不正常
- 1、输出未接零线 1、输出端接零线
- 2、超过稳压器自身的稳压范围 2、更换宽范围稳压器

不稳压

1、超过稳压器自身的稳压范围 1、更换宽范围稳压器

工作中无故跳闸

- 1、总闸容量选择小了 1、更换合适容量空气开关
- 2、浪涌电压瞬间过高 2、更换无触点高精度稳压器

稳压器内部嗡嗡的 声音很大

- 1、超负荷带载了1、减少后接设备
- 2、里面内部有碎屑 2、去除掉碎屑

稳压器内部吱吱的 声音很大

- 1、电压不稳 1、正常
- 2、碳刷表面有灰垢 2、除去污垢

稳压器不能自动运行

1、全自动钮子开关未开启 1、开启

按面板升降压无升压或降压 (非大功率补偿式稳压器无此功能)

1、手动、自动旋钮未开至手动 1、开至手动

友情提示: 若稳压器出现故障, 你无法排除时, 又不能停止给后端设备供电时;请联系精源科技技术支持热线 13823562442

Precise source simple and easy to operate accident analysis and exclude from same as this plane adopt the advanced electron find and protect the technology in voltage stabilizer, so some troubles appearing at work do not mean being problematic, please check according to the following explanation:

Display the reason to analyze and summarize and exclude from starting shooting that has not output, there is no voltage to started or not in trouble 1, Input power cut out

- 1, please guarantee input power as effective An abnormal 1 of output voltage, outputs and has not connected Line zero 1, output end to connect Line zeroing
- 2, Exceed the voltage stabilizer in one's own steady voltage scope 2, change wide scope voltage stabilizer

No steady voltage

1, exceeds the voltage stabilizer in the scope 1 of one's own steady voltage, change wide scope voltage stabilizer

Work trip total floodgate capacity choose a getting light

- 1, change the suitable capacity air switch without reason
- 2, The wave wells up too high 2 of moment of voltage, changes the contactless high-accuracy voltage stabilizer

Very loud overload of sound hummed within the voltage stabilizer connects the apparatus after taking

1 of year, reducing

2, There is piece 2, delete the piece in the inside inside

An unstable

1, normal of very loud voltage of sound creakily creakily within voltage stabilizer The surface of the carbon brush has gray dirt 2, removes the dirt

The voltage stabilizer can't run automatically a button sub switch has not opened

1, opened Until panel go up and down press have step up or step down manually and the automatic knob has not been turned on to 1 manually, turned on manually

The friendship is pointed out: If the voltage stabilizer breaks down, when you are unable to get rid of, when can't stop supplying power for the back apparatus; Please contact the scientific and technological technical support hot line 13823562442 of the precise source